

USER MANUAL 208.PROG CARD PROGRAMMER

CARD PROGRAMMER


PROGRAMMER SOFTWARE – For Microsoft Windows operating systems only



- Download the driver and the programmer software (208.PROG) from the download area on our website: <https://e-mobility.scame.com>
- Open and extract the entire contents of the file **archivio.zip**
- Open the folder **Driver_ProgrammatoreActive**
- Install the driver **CP210xVCIInstaller**
- Connect the programmer to the PC via USB
- From Control Panel -> Device Management check the COM port number associated with the device
- Run the application **SLActive**
- From Options -> Com Port set the COM port number associated with the device.

USER CARD PROGRAMMER

- Run the application **SLActive_admin_v2.1**
- Place the user card onto the programmer
- With the user card not initialized, click **USER CARD**
- Fill in the card code field (mandatory):
 - ◇ This is the card code that will be saved inside the station
 - ◇ 8 user defined hexadecimal digits (e.g. AAAA0001)
 - ◇ Click **UID** to automatically acquire the UID code of the card
- Insert the number of accesses field (optional):
 - ◇ This is the number of cumulative accesses for which the card is enabled (from 1 to 65000)
 - ◇ To disable control, leave the field empty
- Insert an expiry date (optional):
 - ◇ This is the date after which the card will no longer be enabled (Day/month/year/hour)
 - ◇ Click the **clock** icon to acquire the current date and time
 - ◇ To disable control, leave the field empty
- Click **Write card**

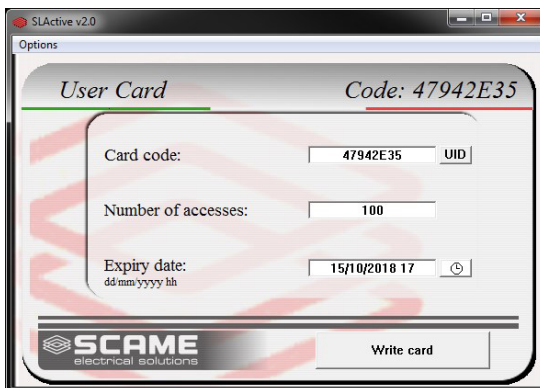



BUSINESS UNIT E-MOBILITY
VIA SPIAZZI, 45
24028 PONTE NOSSA (BG) ITALY
TEL. +39 035 705000
FAX +39 035 703122
e-mobility.scame.com
e-mobility@scame.com

ZP91152-GB-1